 


Dunlopillo - Seed Soul

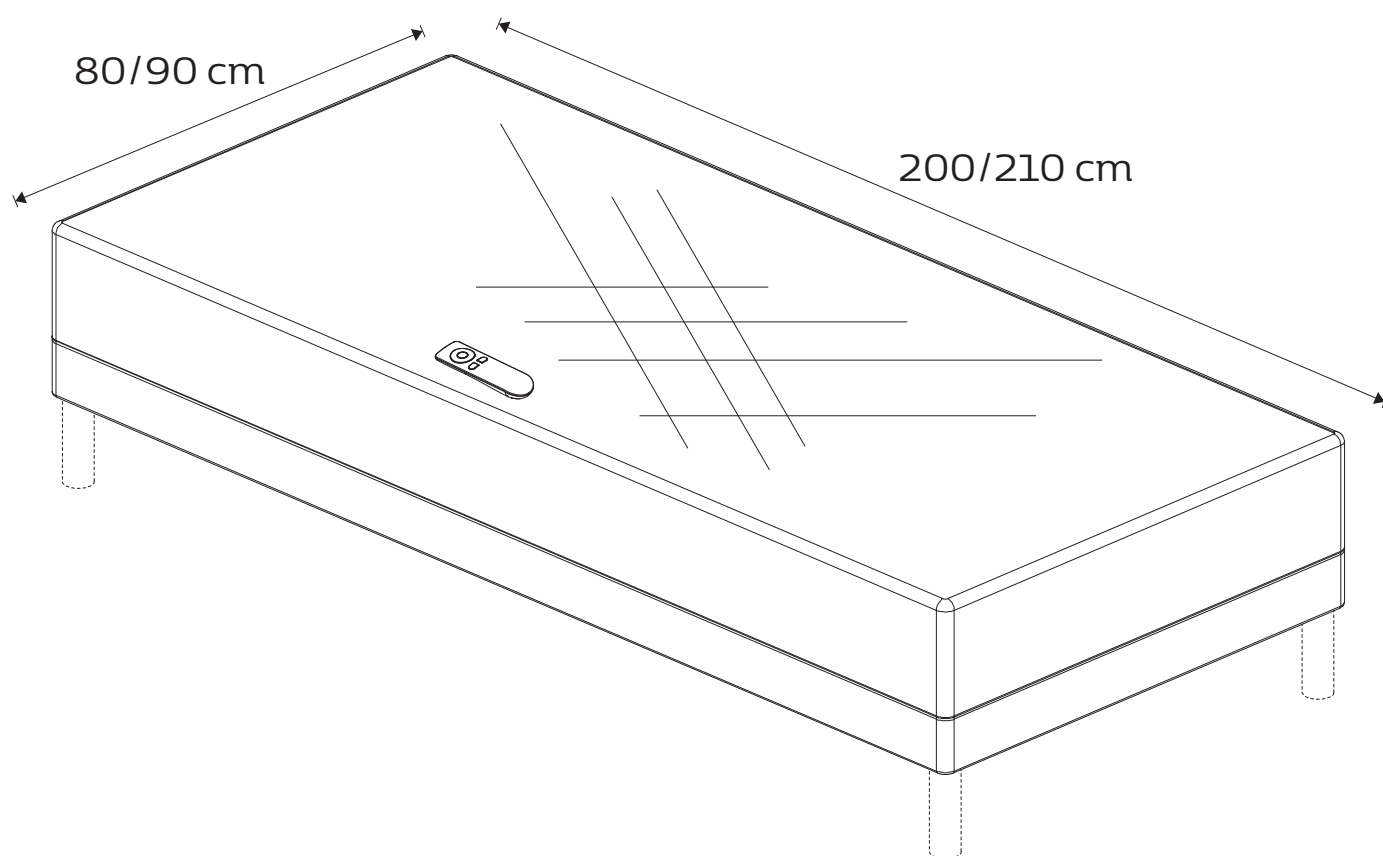

FR
Pensez à
donner ou recycler.



Association

ou



Magasin

ou



Déchèterie

 
<https://quefairedemesdechets.fr>

15.04.2026 - Rev. 1

1/24

Dunlopillo®
det naturlige valg

DP Seed Soul W1208010120

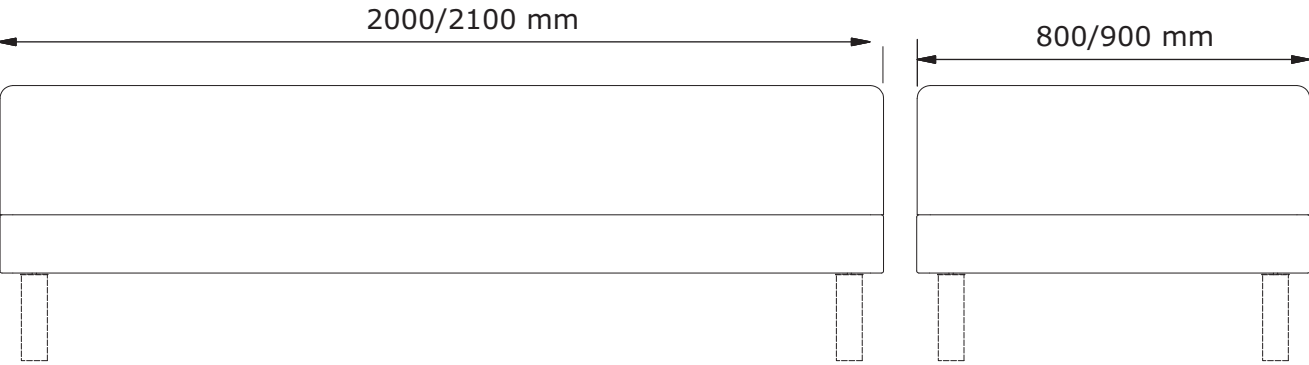



GB:

 
IMPORTANT INFORMATION!

Please read the entire manual carefully before starting to assemble and/or using this product. Follow the manual thoroughly and keep it for further reference

DK:

VIGTIG INFORMATION!

Læs hele manualen grundigt igennem før samling og/eller brug af dette produkt. Følg manualen nøje, og opbevar den til senere brug.

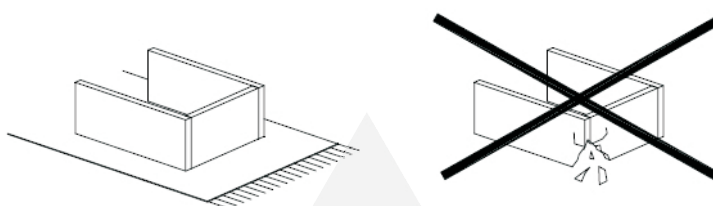

GB:

WARNING TO AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

DK:

ADVARSEL FOR AT FORHINDRE RIDSER!

For at forhindre ridser skal dette møbel samles på et blødt underlag, f.eks. et tæppe.

GB:

IMPORTANT!

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

DK:

VIGTIGT!

Det er vigtigt, at alle produkter, der samles med alle former for skruer, efterspændes to uger efter samling samt hver tredje måned for at sikre, at produktet er stabilt i hele dets levetid.



GB:

GENERAL INSTRUCTION FOR FURNITURE WITH FABRIC!

Wipe clean with a damp cloth. Use only clean water.

Dust and dirt can be vacuum cleaned or wiped with a clean soft cloth.

Do not use detergents, solvents or other chemicals on fabric as this may cause discoloration.

However, certain removable fabrics may be washed, but in such cases there will ALWAYS be a washing instruction on the fabric.

DK: GENEREL VEJLEDNING TIL MØBLER MED STOF!

Rengøres med en fugtig klud. Anvend kun rent vand.

Støv og snavs støvsuges eller tørres af med en ren blød klud.

Brug ikke vaskemidler, opløsningsmidler eller andre kemikalier på stof, da dette kan medføre misfarvninger.

Visse aftagelige stoffer kan dog vaskes, men der vil i sådanne tilfælde ALTID være en vaskeanvisning på stoffet.

GB:

Uses 1 9V + 2 AAA batteries.

Batteries included.

Do not use rechargeable batteries.

Do not recharge non-rechargeable batteries.

Do not mix old and new batteries or battery types.

Only use batteries that are the same or similar to instruction manual's battery requirements. Insert batteries with poles facing correctly.

Remove exhausted batteries from the product.

Do not short-circuit supply terminals.

Do not throw batteries on open fire.

DK:

Bruger 1 stk. 9V + 2 stk. AAA-batterier.

Batterier medfølger

Anvend ikke-genopladelige batterier.

Ikke-genopladelige batterier må ikke oplades.

Batterier af forskellige typer eller nye og brugte batterier må ikke blandes.

Der må kun anvendes batterier af samme eller lignende type i henhold til instruktionerne. Batterier skal isættes med rigtig polaritet.

Opbrugte batterier skal fjernes fra produktet.

Forsyningsklemmer må ikke kortsluttes.

Batterierne må ikke kastes på ild.



GB:

Disposal of waste equipment by users in private households in the European Union.

This symbol indicates that this product including batteries must not be disposed of with your other household waste. Batteries, electrical and electronic equipment contain substances which may cause damage to human health and environment if not recycled correctly. It is your responsibility to hand over to a designated collection point for recycling of waste batteries, electrical and electronic equipment.

When handing over for correct recycling you help to prevent these products straining nature and environment unnecessarily and to protect human health.

For more information regarding correct disposal, please contact your local city office, your household waste disposal service or the store where you purchased this product.

DK:

Bortskaffelse af elektrisk og elektronisk affald for brugere i private husholdninger i EU.

Elektrisk og elektronisk udstyr samt medfølgende batterier indeholder materialer, komponenter og stoffer, der kan være skadelige for menneskers sundhed og for miljøet, hvis affaldet ikke håndteres korrekt. Elektrisk og elektronisk udstyr og batterier er mærket med den overkrydsede skraldespand. Den symboliserer, at elektrisk og elektronisk udstyr og batterier ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Som slutbruger er det vigtigt, at du afleverer dine udtjente batterier til de ordninger, der er etablerede.

På denne måde er du med til at sikre, at batterierne genanvendes i overensstemmelse med lovgivningen og ikke unødigt belaster miljøet.

Alle kommuner har etableret indsamlingsordninger, hvor kasseret elektrisk og elektronisk udstyr samt bærbare batterier gratis kan afleveres af borgerne på genbrugsstationer og andre indsamlingssteder eller bliver afhentet direkte fra husholdningerne. Nærmere information kan fås hos kommunens tekniske forvaltning.



EF overensstemmelseserklæring

Det erklæres hermed at:

Elevationsseng VIP20

Er produceret i overensstemmelse med følgende direktiver:

- Maskindirektivet - 2006/42/EF
- Lavspændingsdirektivet - 2014/35/EU
- EMC direktivet - 2014/30/EU
- RoHS direktivet - 2011/65/EU

 
 
 
 
 
 
 
 
EU Declaration of conformity

 
It is hereby declared that the product:

Elevationsseng VIP20


Is produced in accordance to the following rules and regulative:

- The Machinery Directive - 2006/42/EF
- The Low Voltage Directive - 2014/35/EU
- EMC Directive - 2014/30/EU
- RoHS Directive - 2011/65/EU

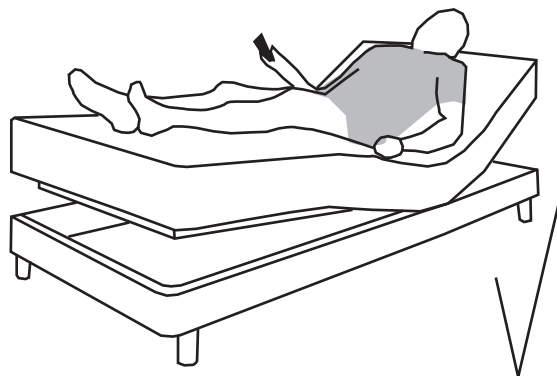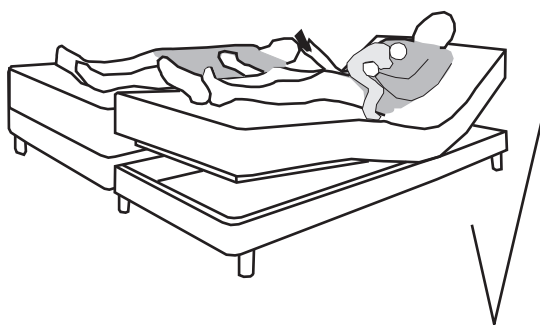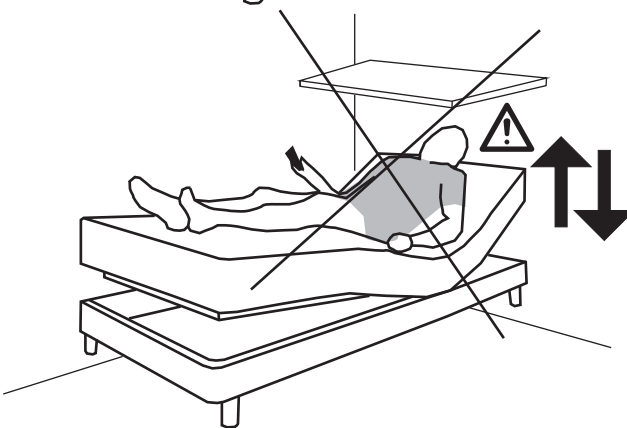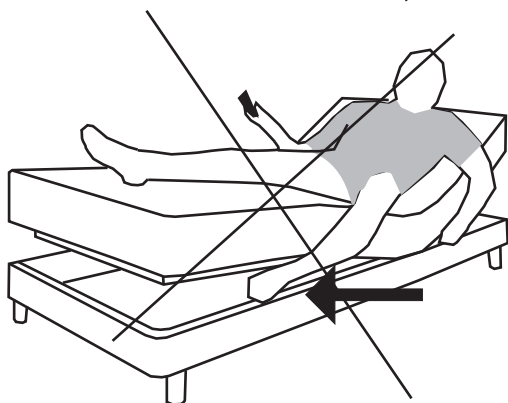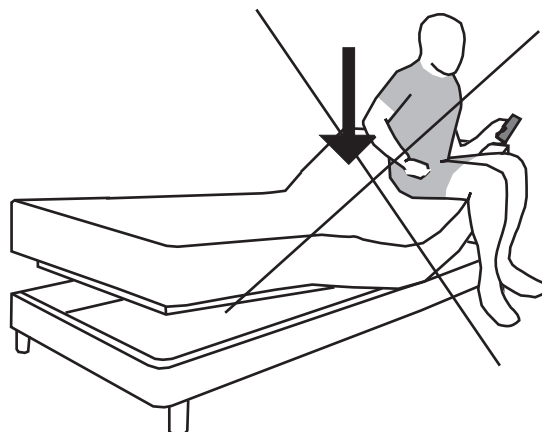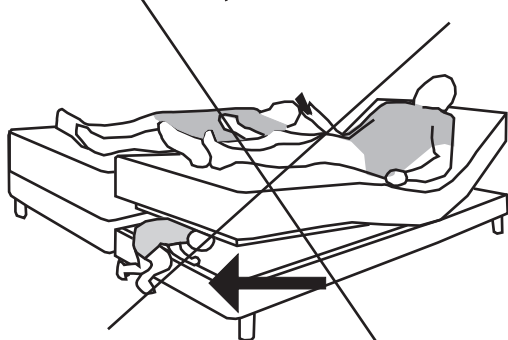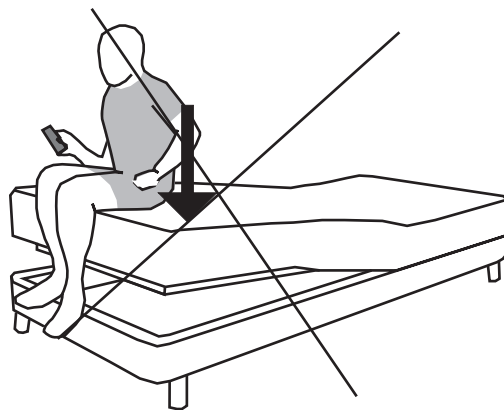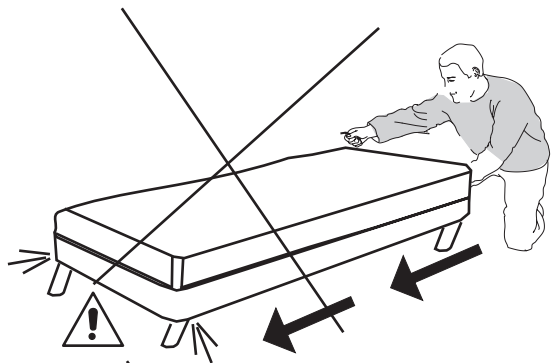

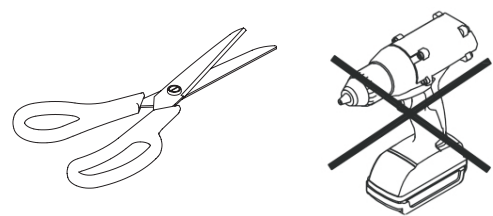


A x 12

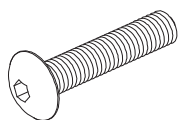 


M6 x 20 mm

 B x 4

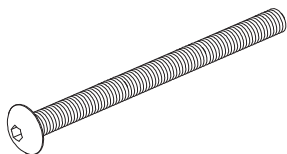


M6 x 60 mm

 C x 1

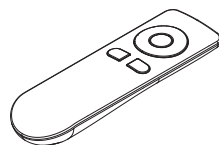

145 x 44 x 21,2 mm

 D x 1

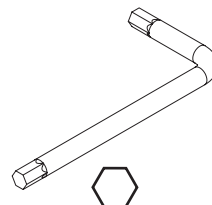



5 mm

E x 2




  F x 1



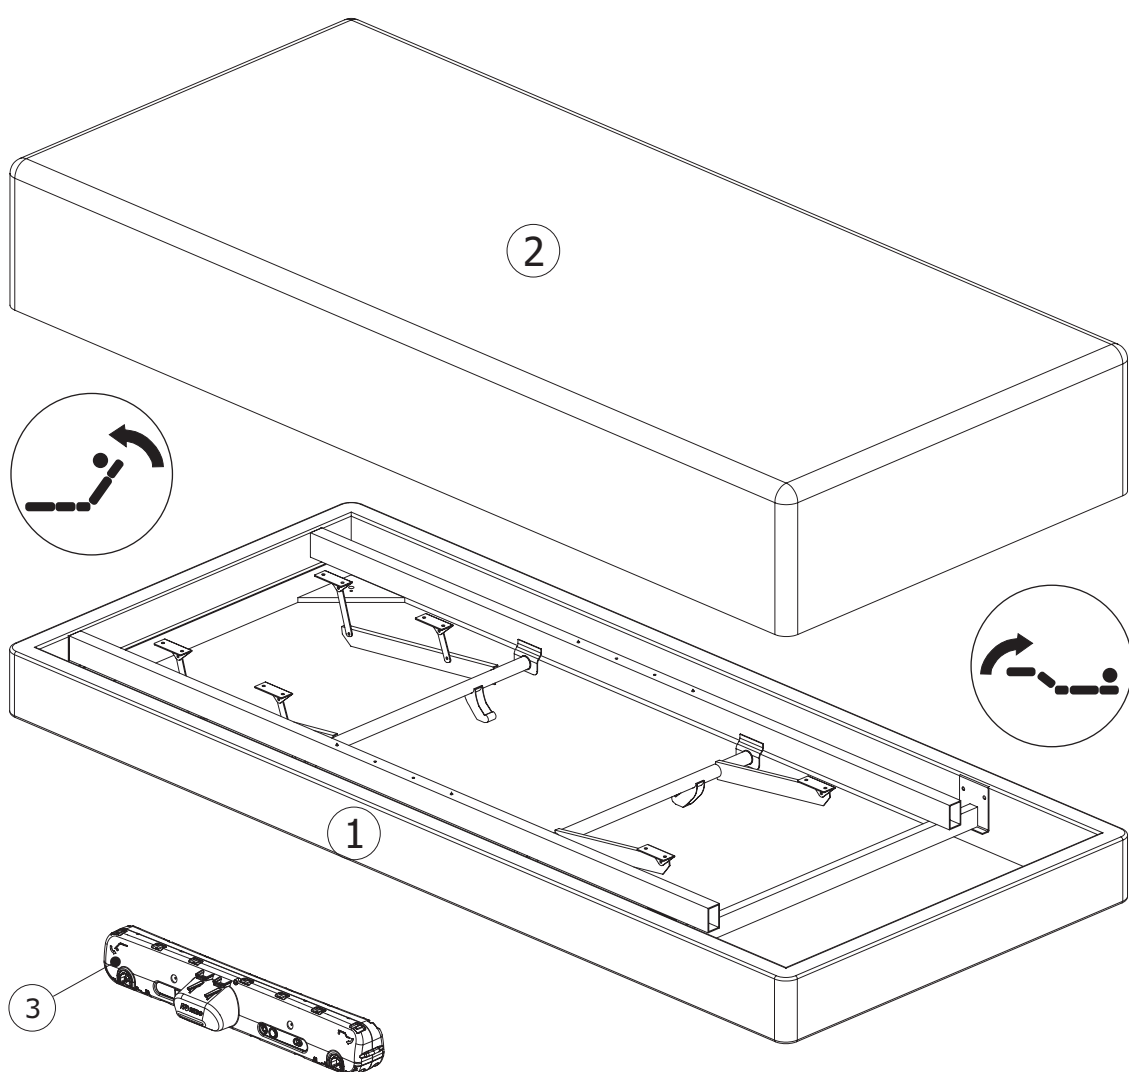


Box 1/2:

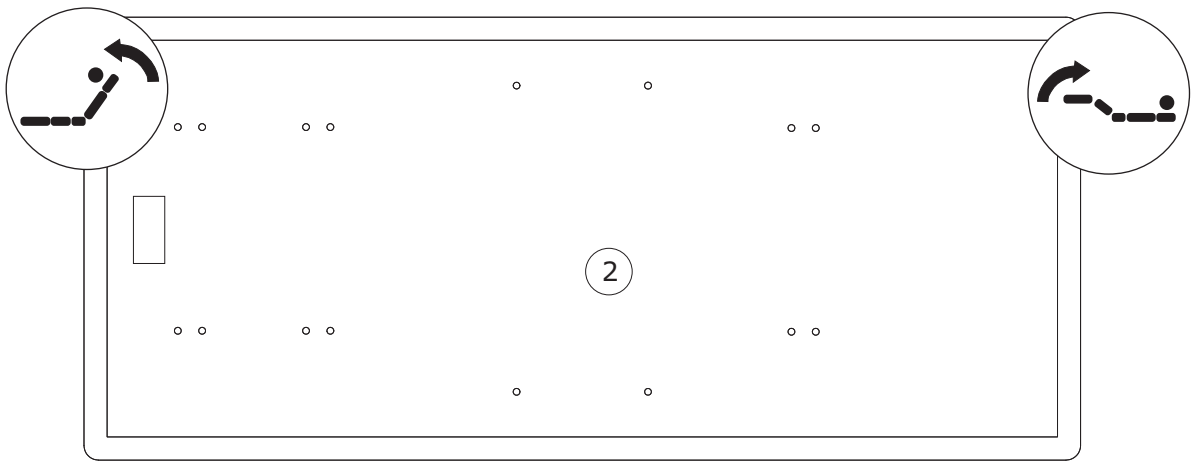 


2000/2100x800/900 mm





 
Box 2/2:

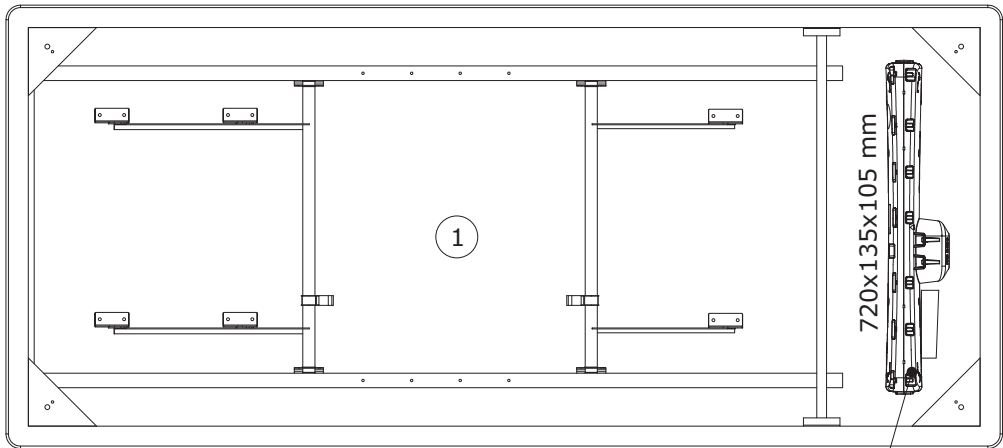




2000/2100x800/900 mm

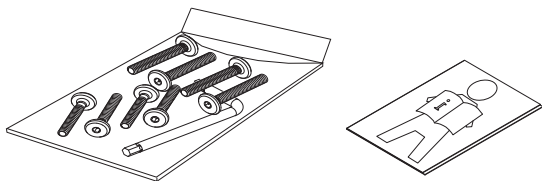 


1

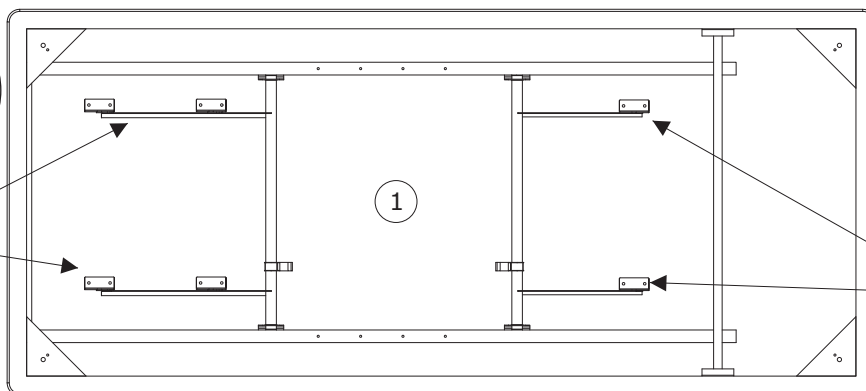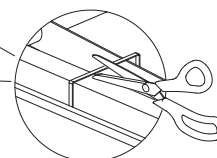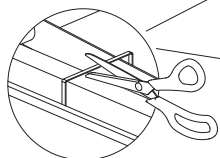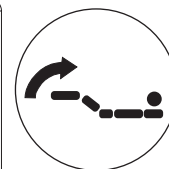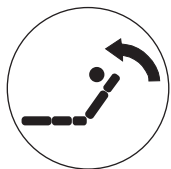     


2

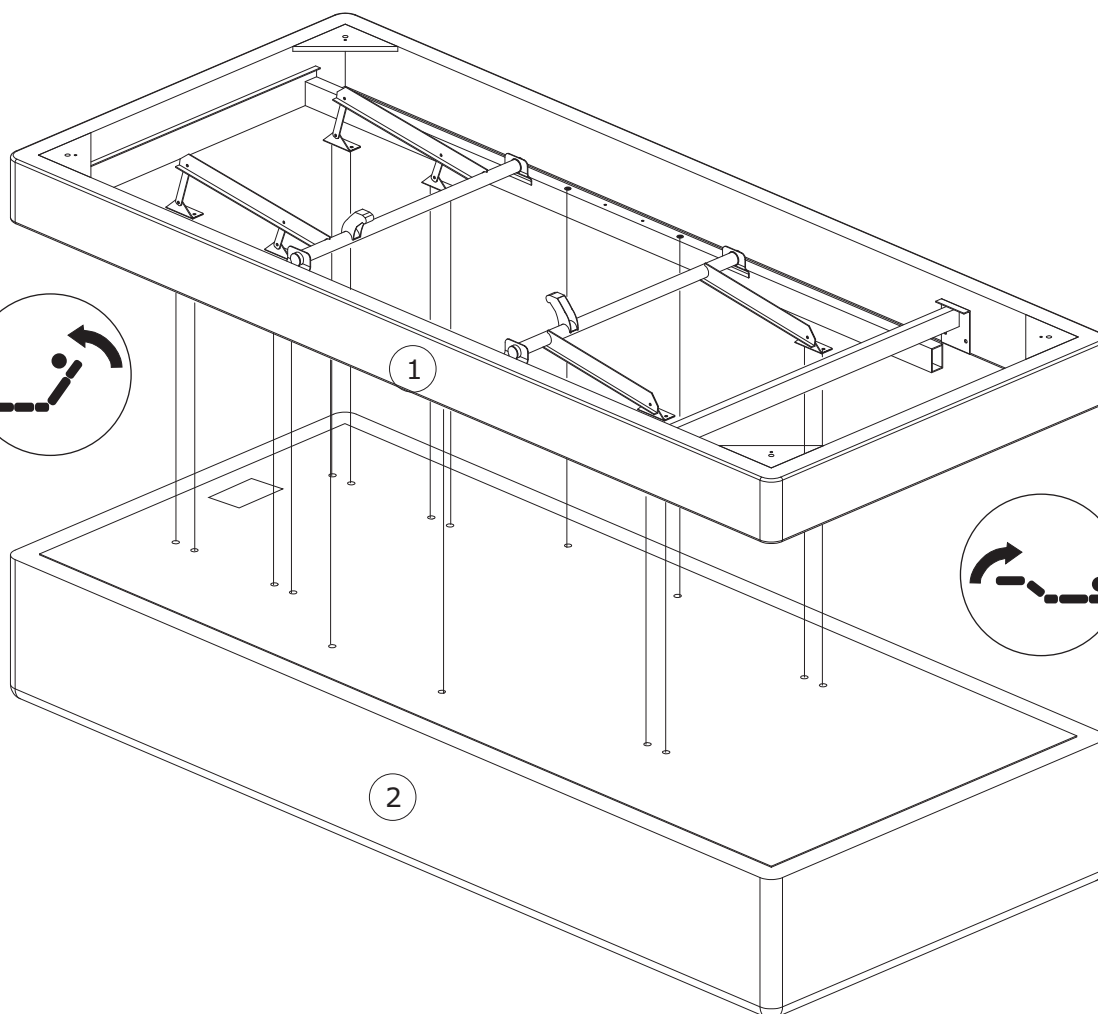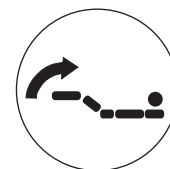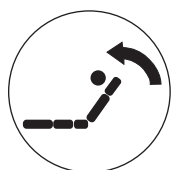   





3

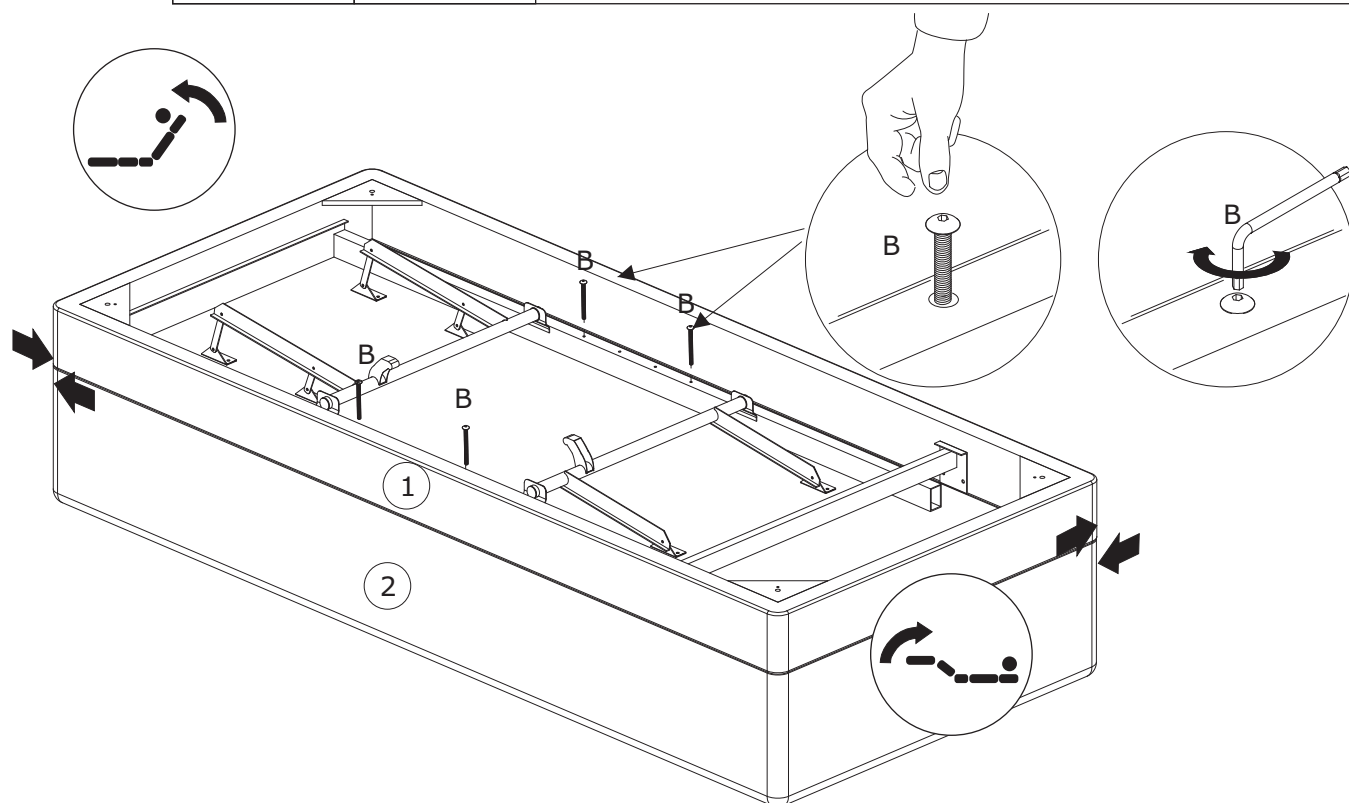 




4

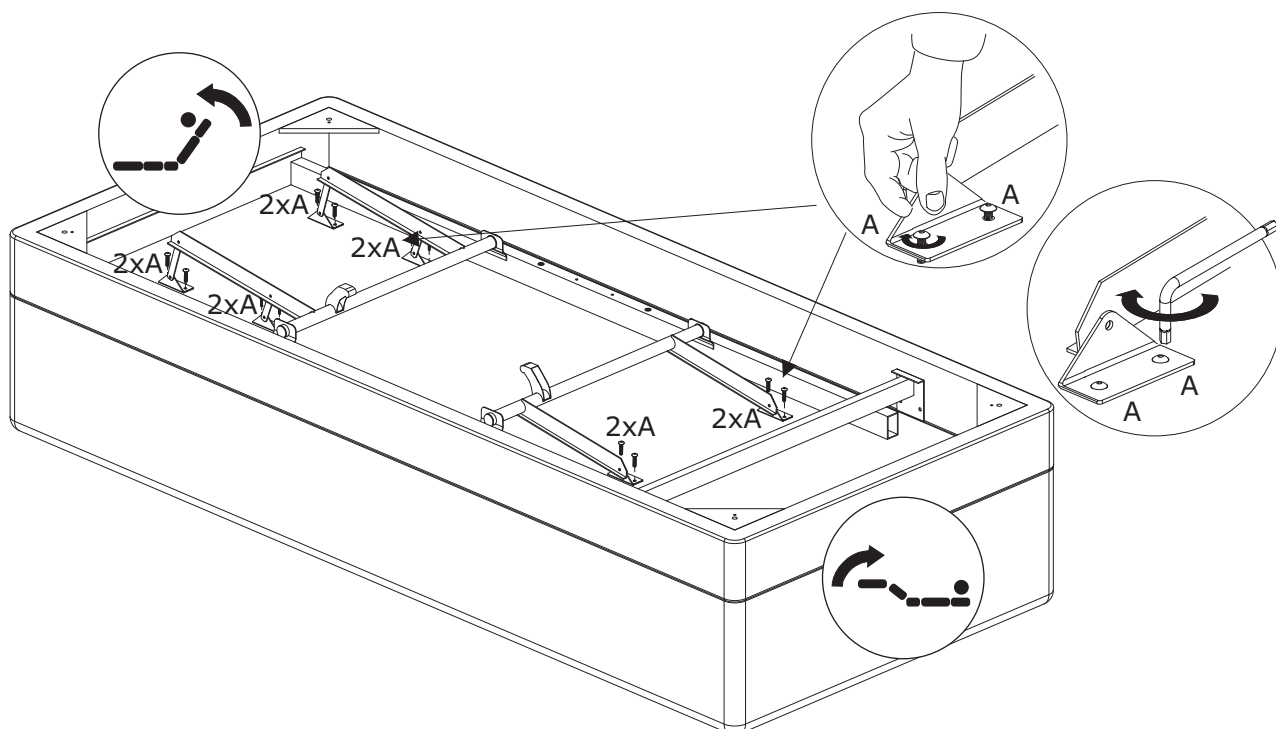 


5

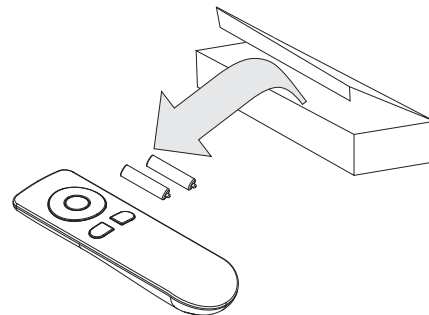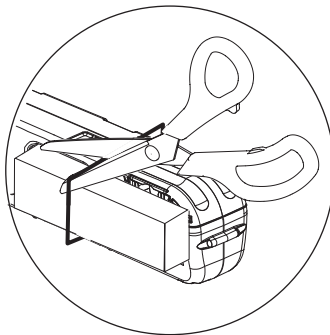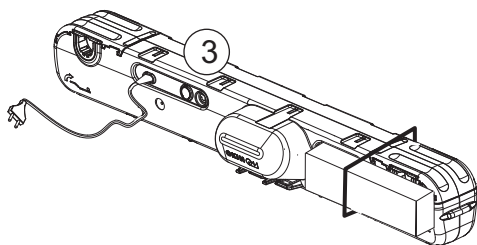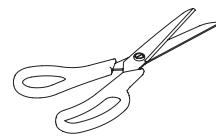    




6

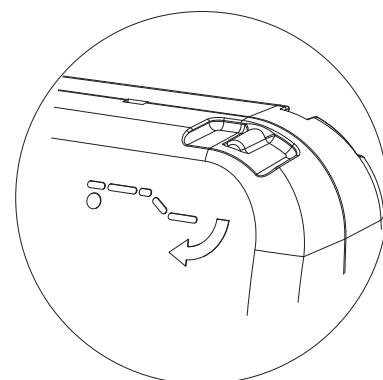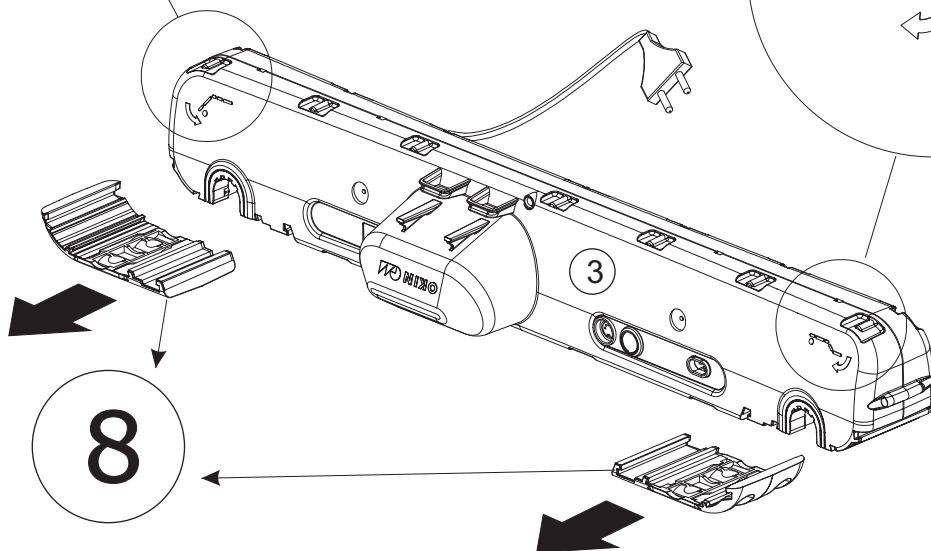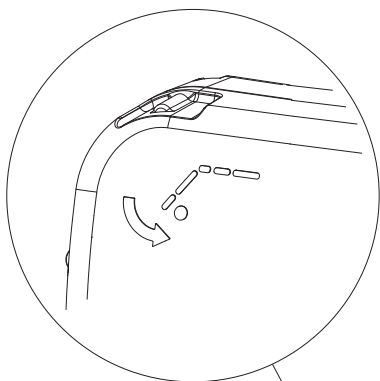   


7





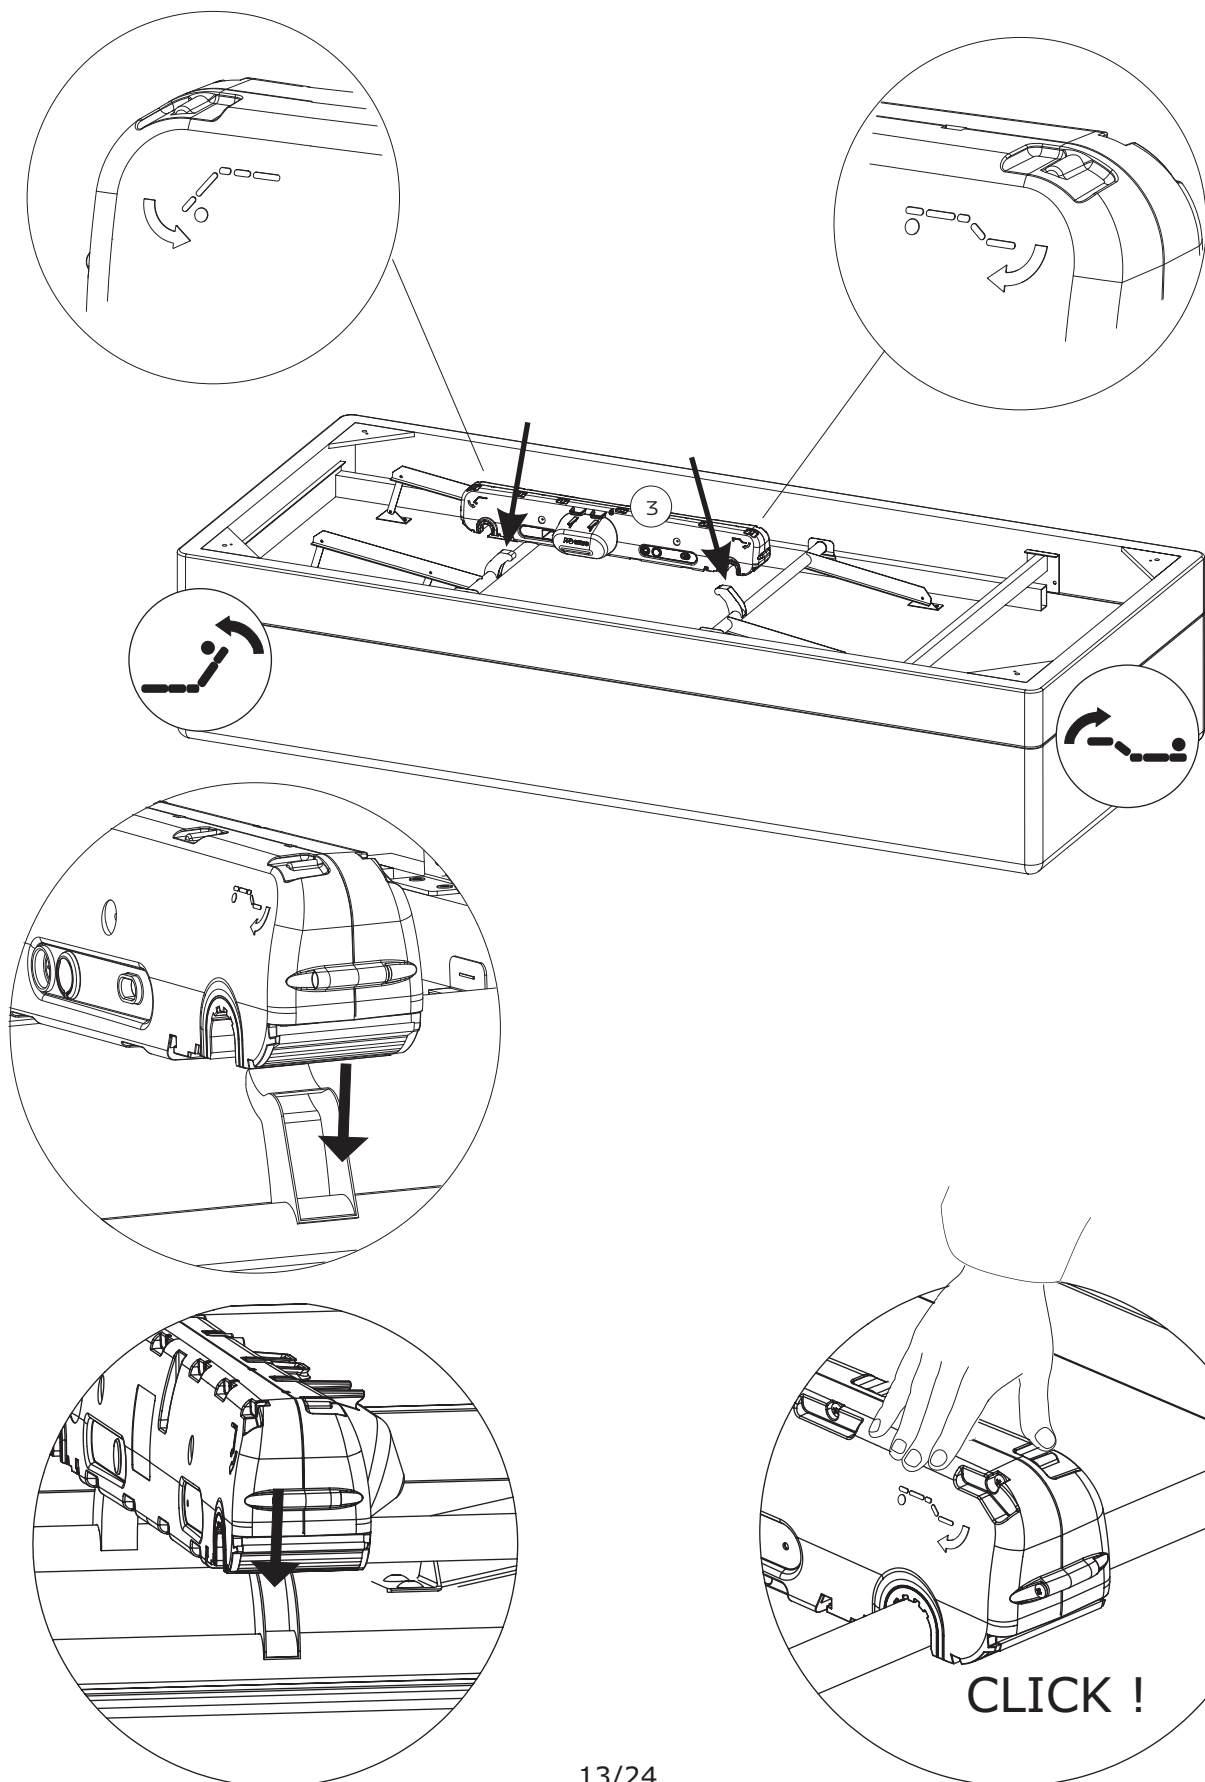 


8

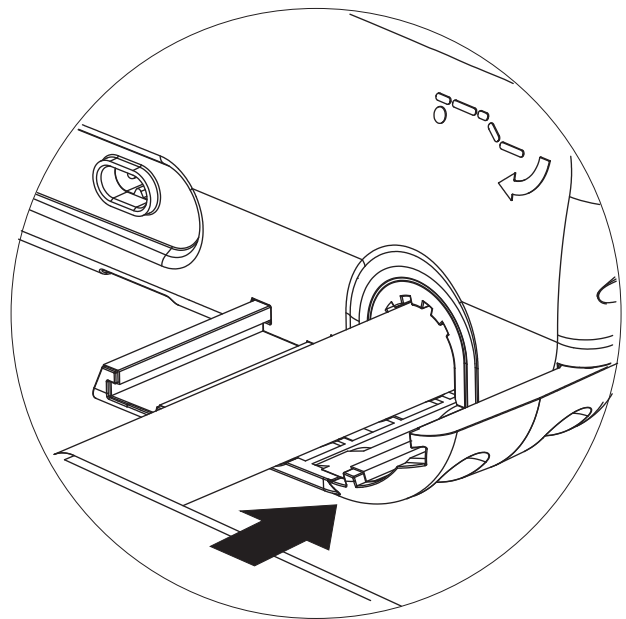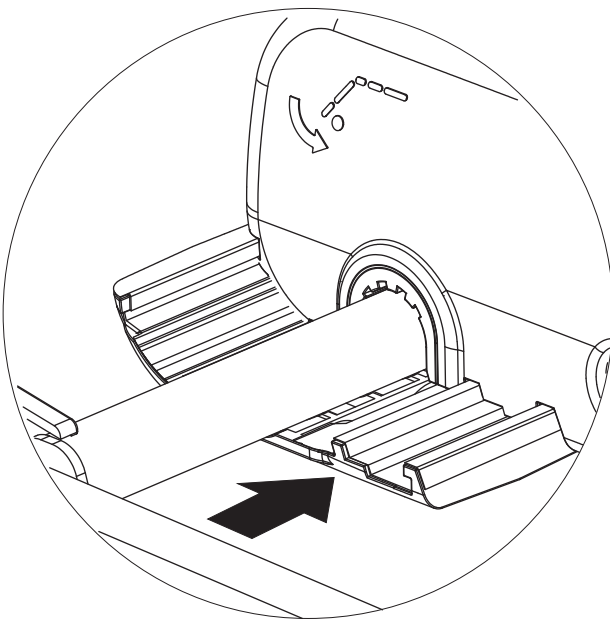  
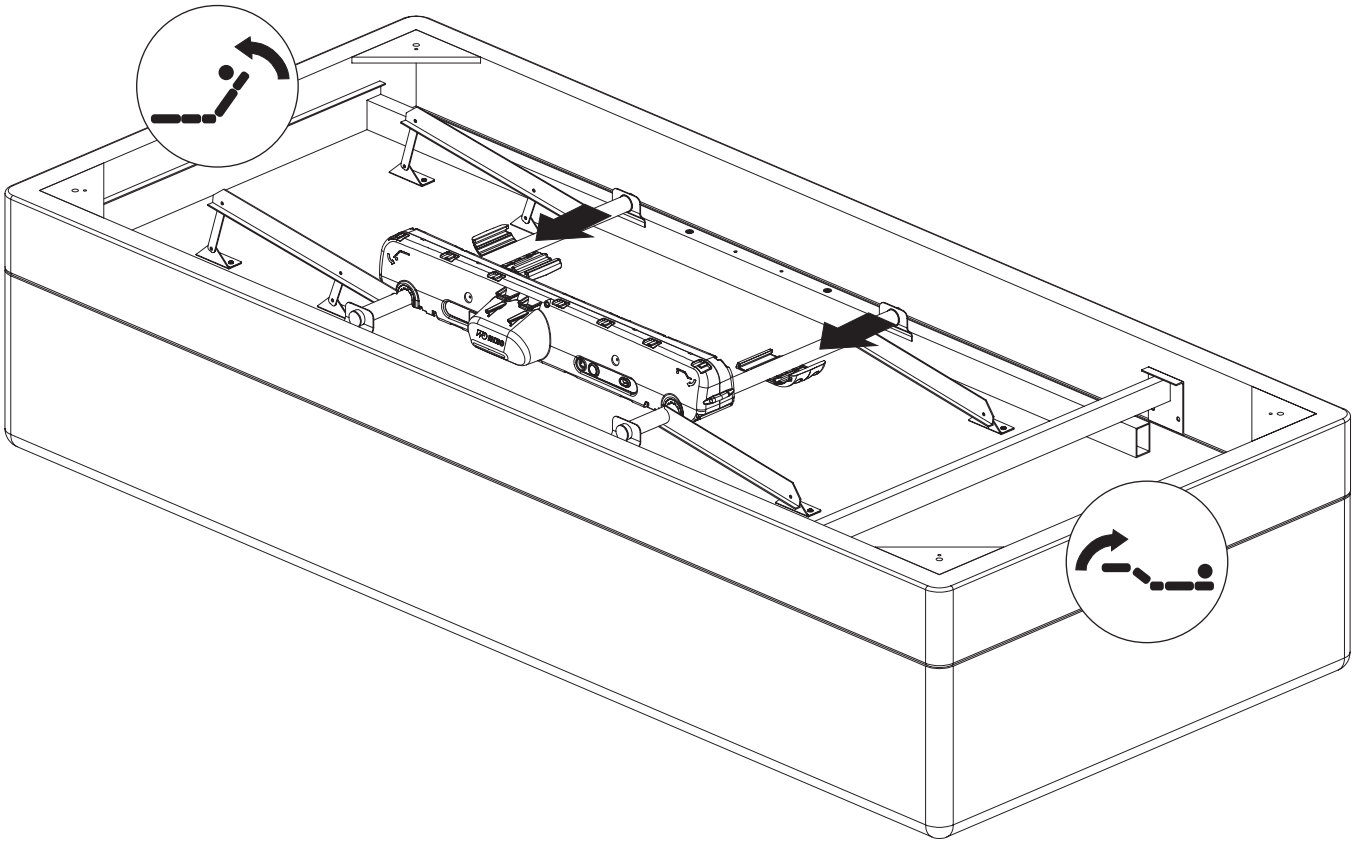 



9

 C x 1 	E x 2 	
--	--	--

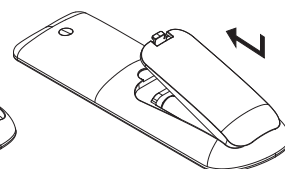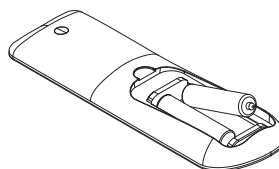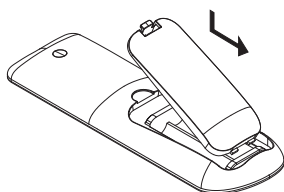   
 
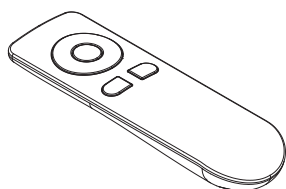 


10

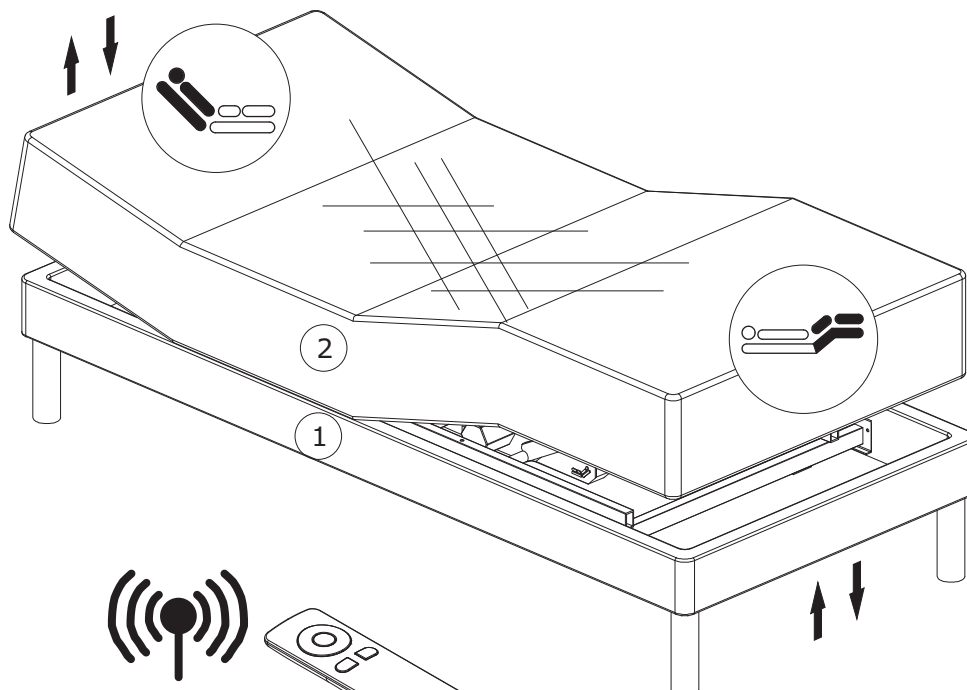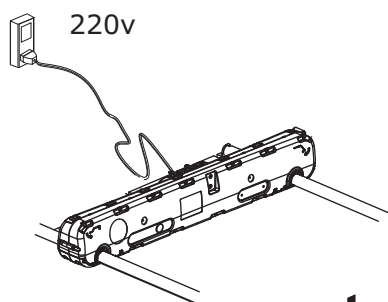  

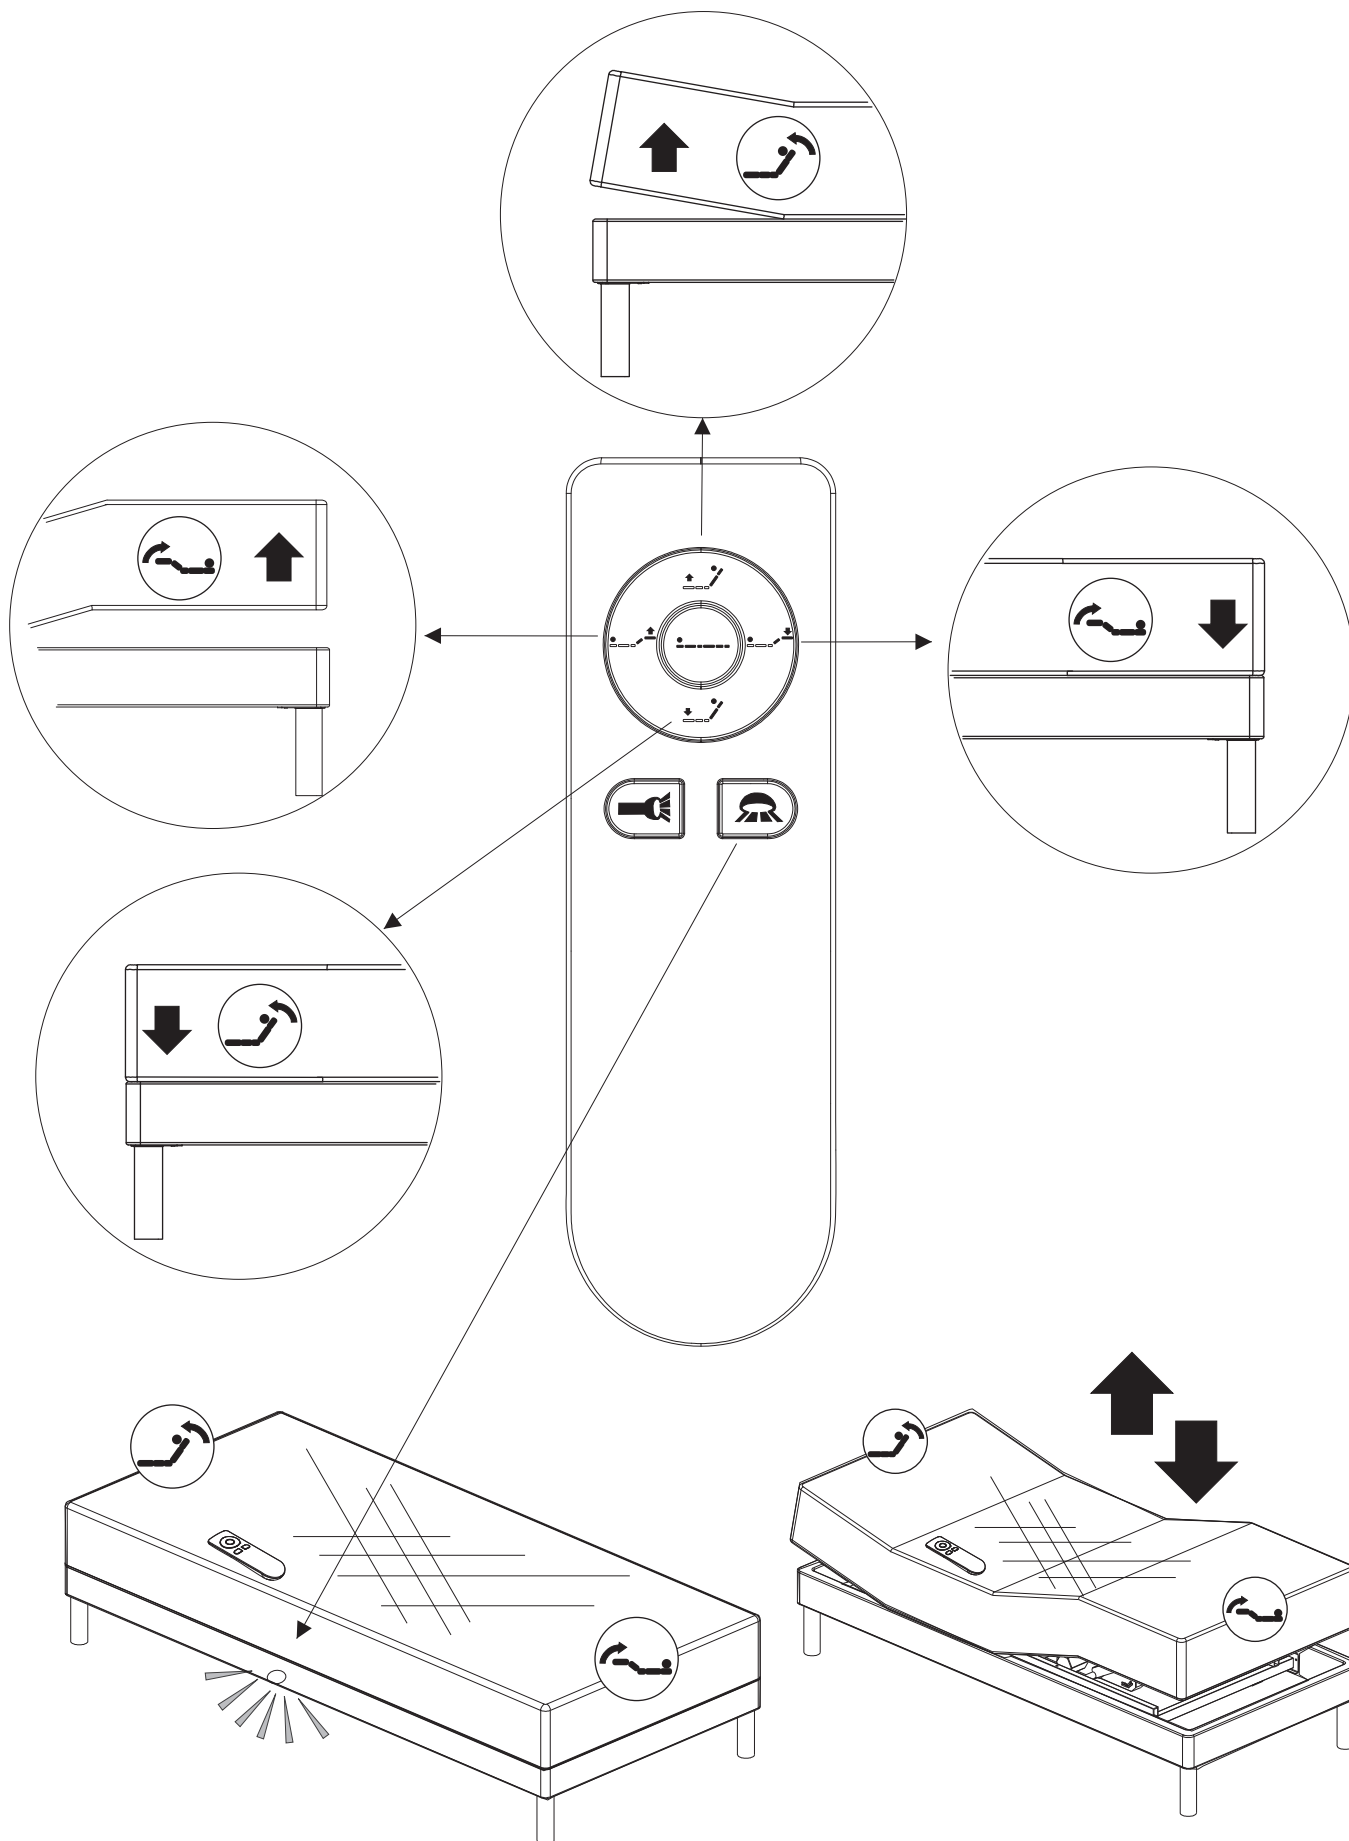 


11

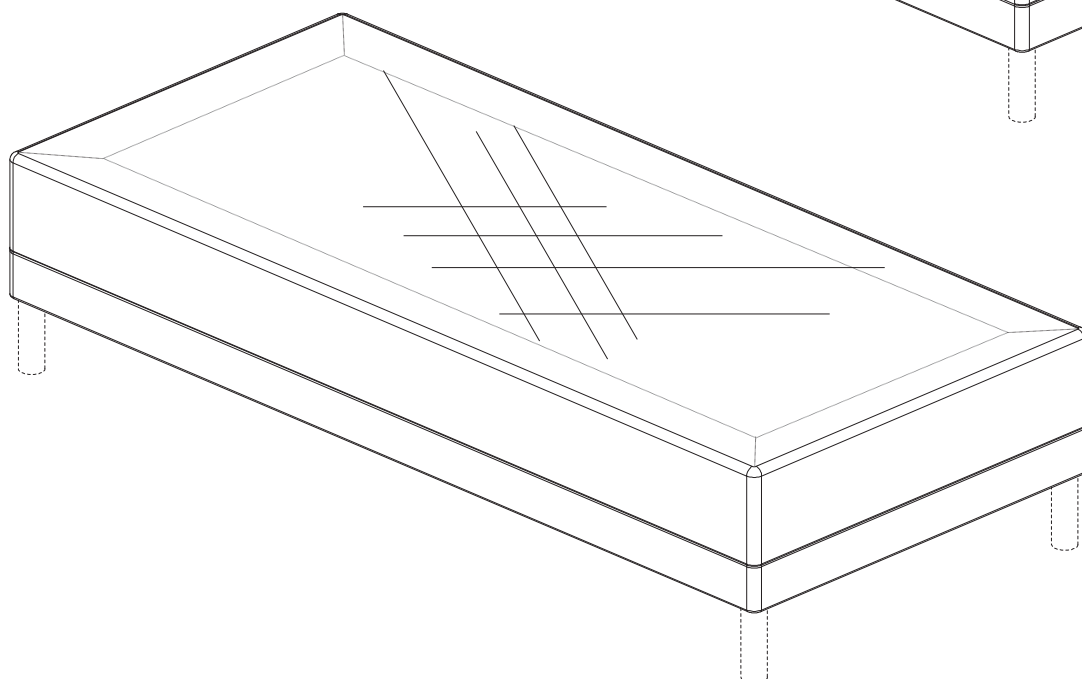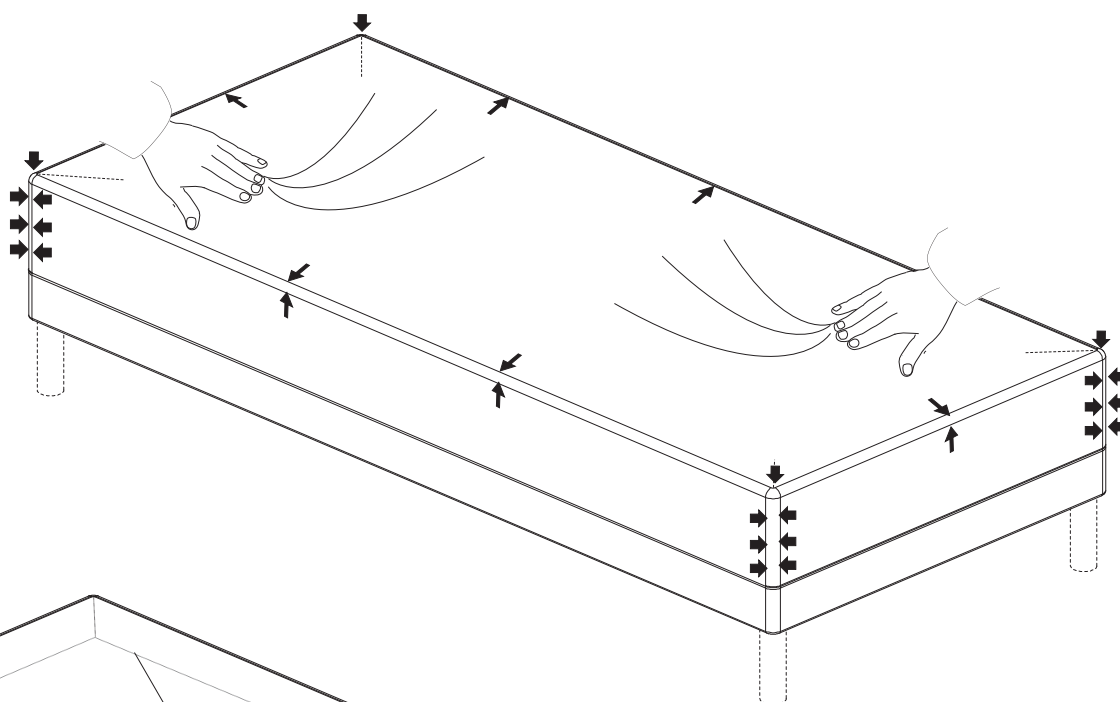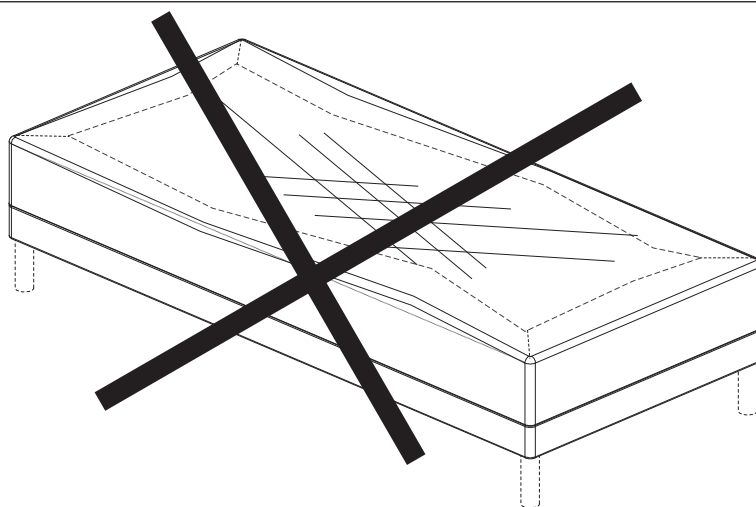   







12

 GB: Is the motor connected to an active socket?
DK: Er motor tilsluttet en aktiv stikkontakt?


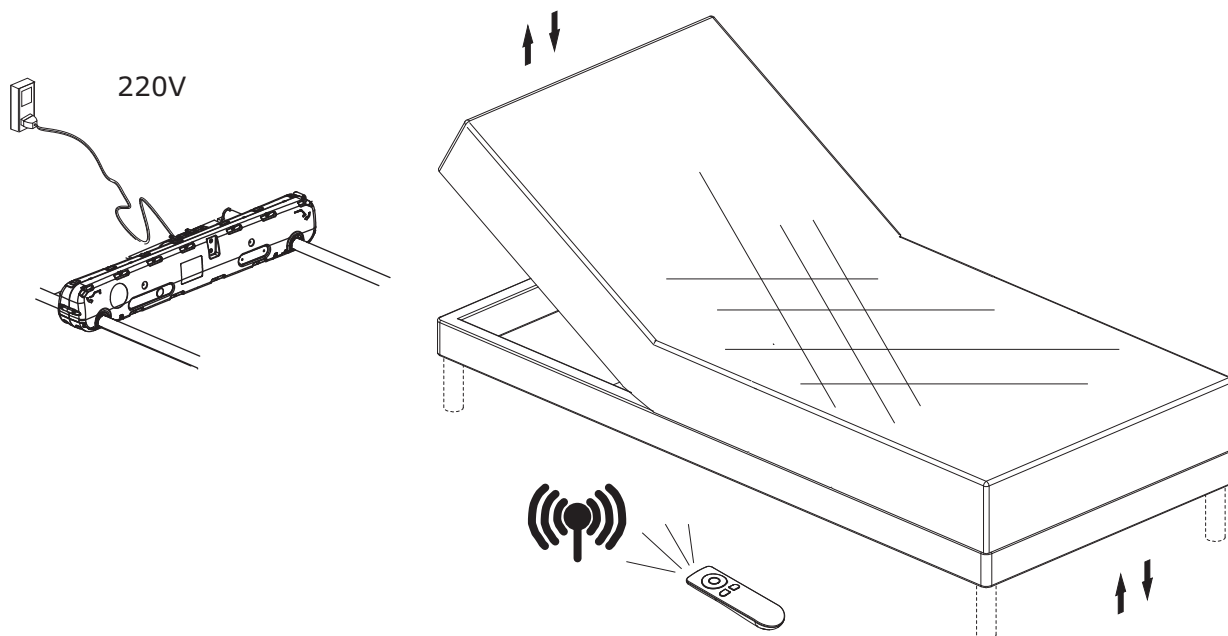


13

     
 
GB: Check that the batteries are facing correctly in the remote control or replace the batteries in the remote control.
DK: Kontroller at batterierne vender korrekt i fjernbetjeningen eller udskift batterier i fjernbetjeningen.

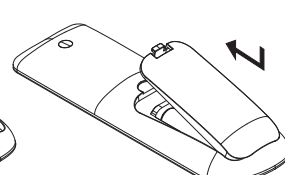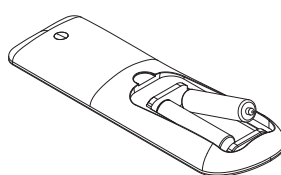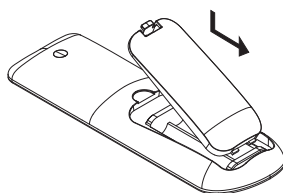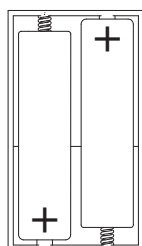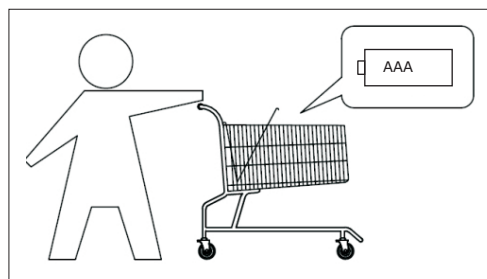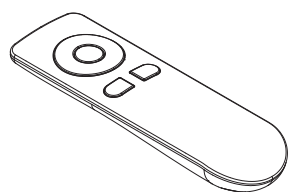

14

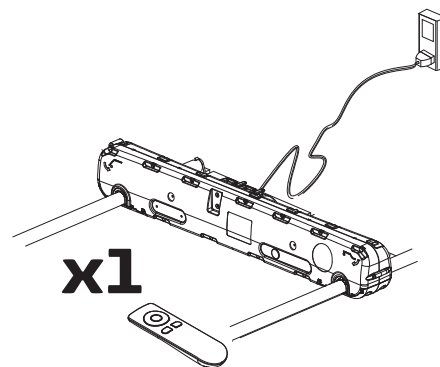 
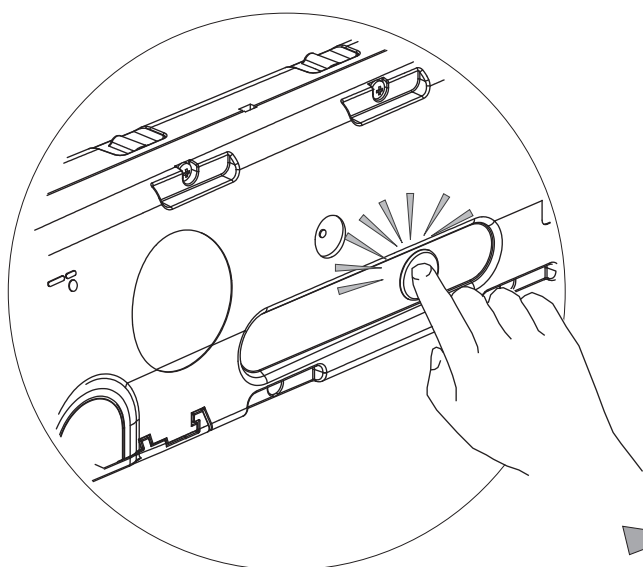 


x2 (QUICK)

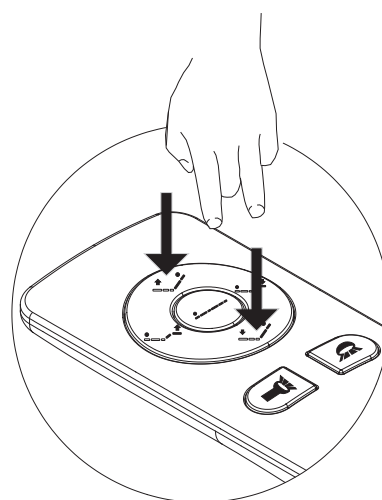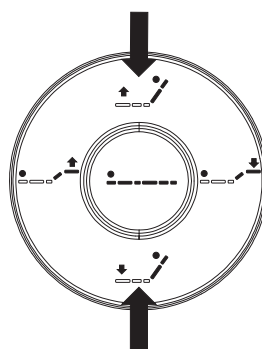  



15

  GB:
Connecting motor no. 2 for synchronous lifting:
Same method as motor no. 1, just use these buttons
DK:
Tilkobling af motor nr. 2 ved synkron løft:
Samme metode som motor nr. 1, anvend blot disse knapper

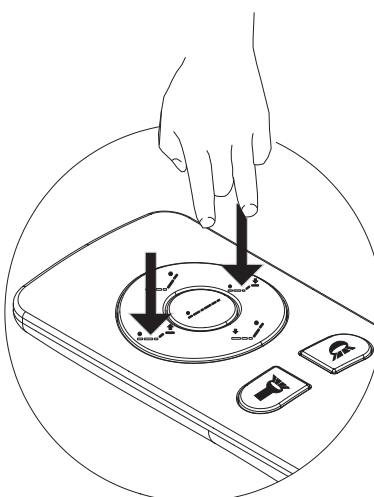
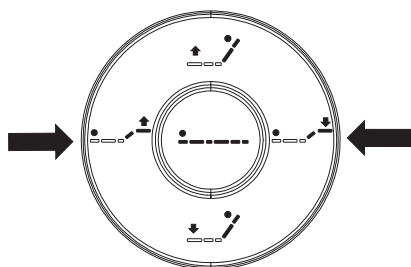


16

  
GB:
Factory reset
DK:
Nulstilling til fabriksindstillinger




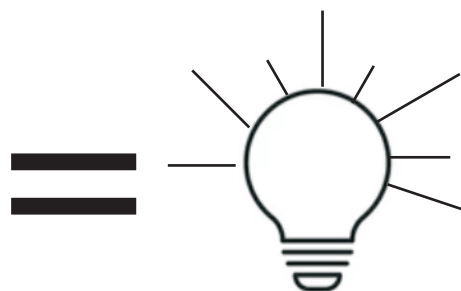
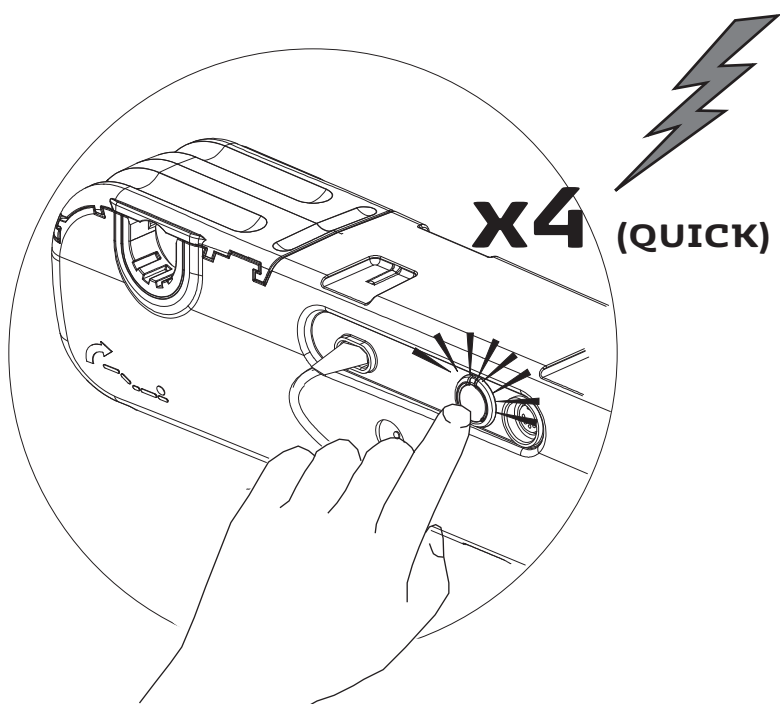


+

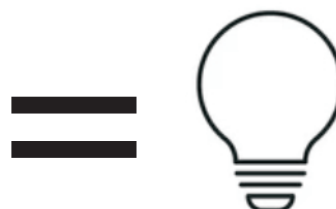 
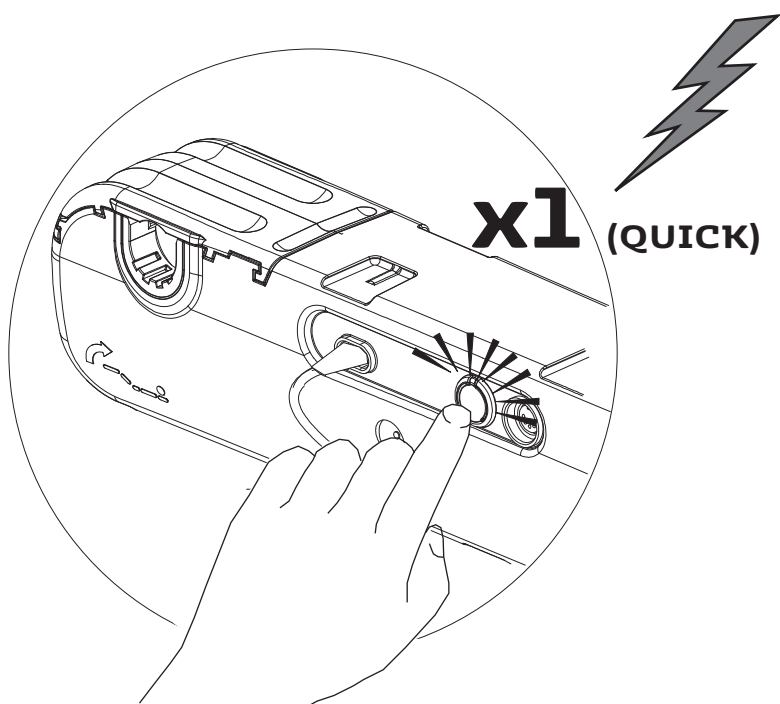 


17

 C x 1 	E x 2 	
--	--	--

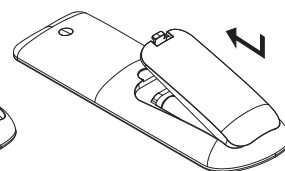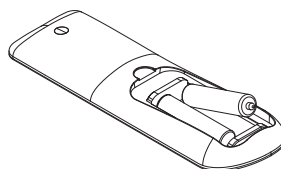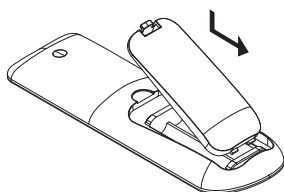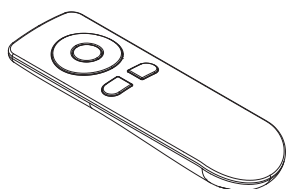     

18

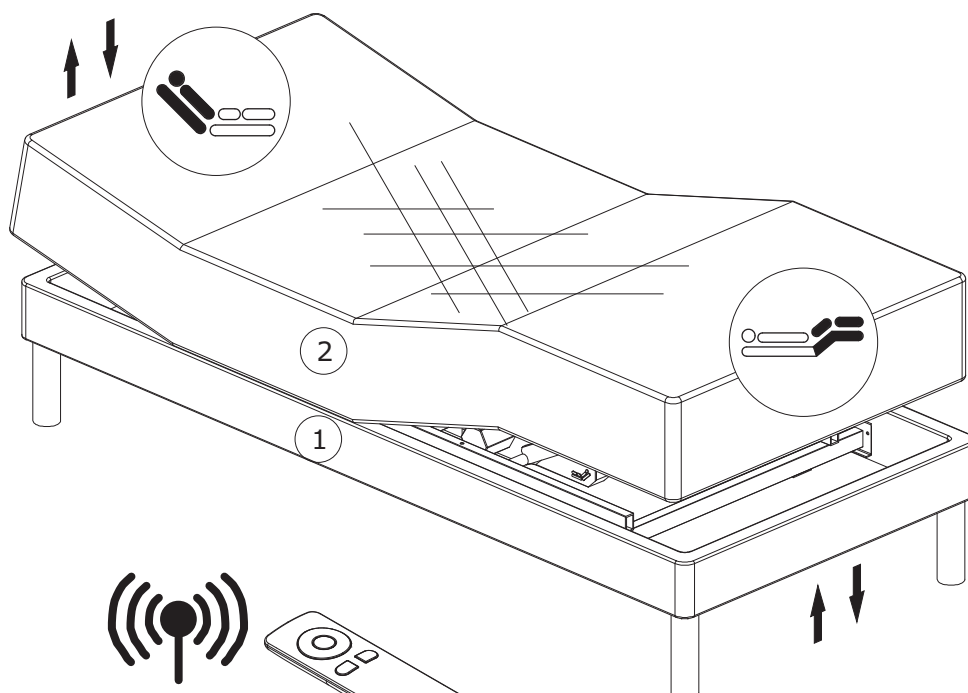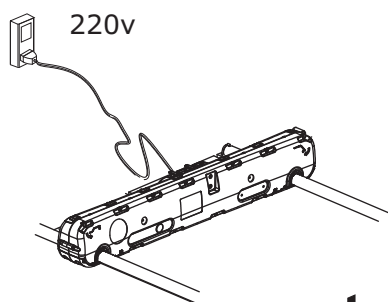  

19

F x 1

9V

 
 
 
 
GB: Emergency lowering.

In the event of a power outage, the bed can be lowered without 220V power. Mount both poles on the 9V battery, press the button on the side of the motor and the bed will slowly return to the starting position








DK: Nødsænkning.

Ved strømafbrydelse kan sengen sænkes uden 220V strøm.

Monter begge poler på 9V batteri, tryk på knappen på siden af motoren og sengen vil langsomt køre tilbage til startposition.

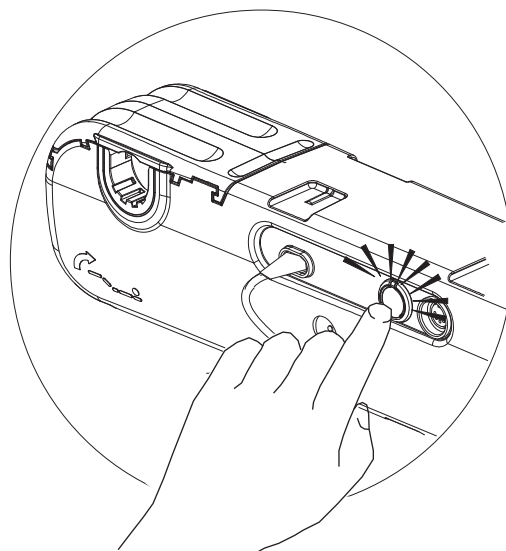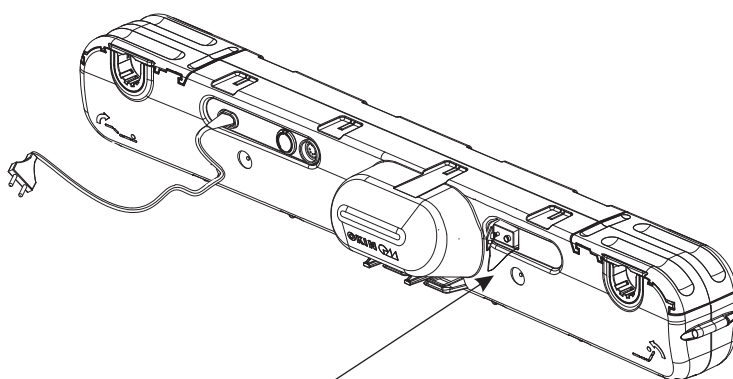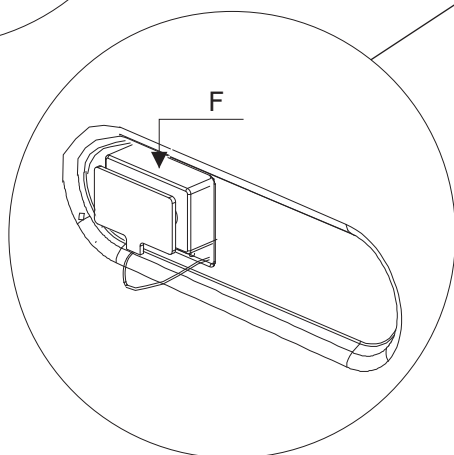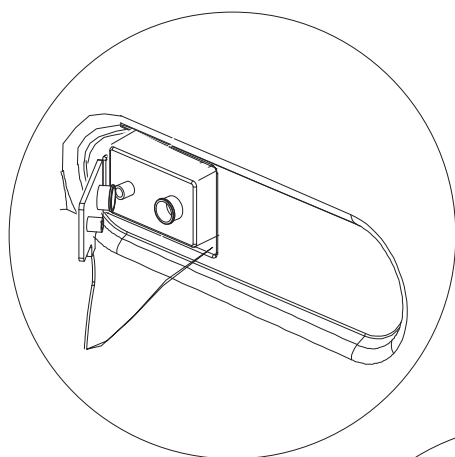

20

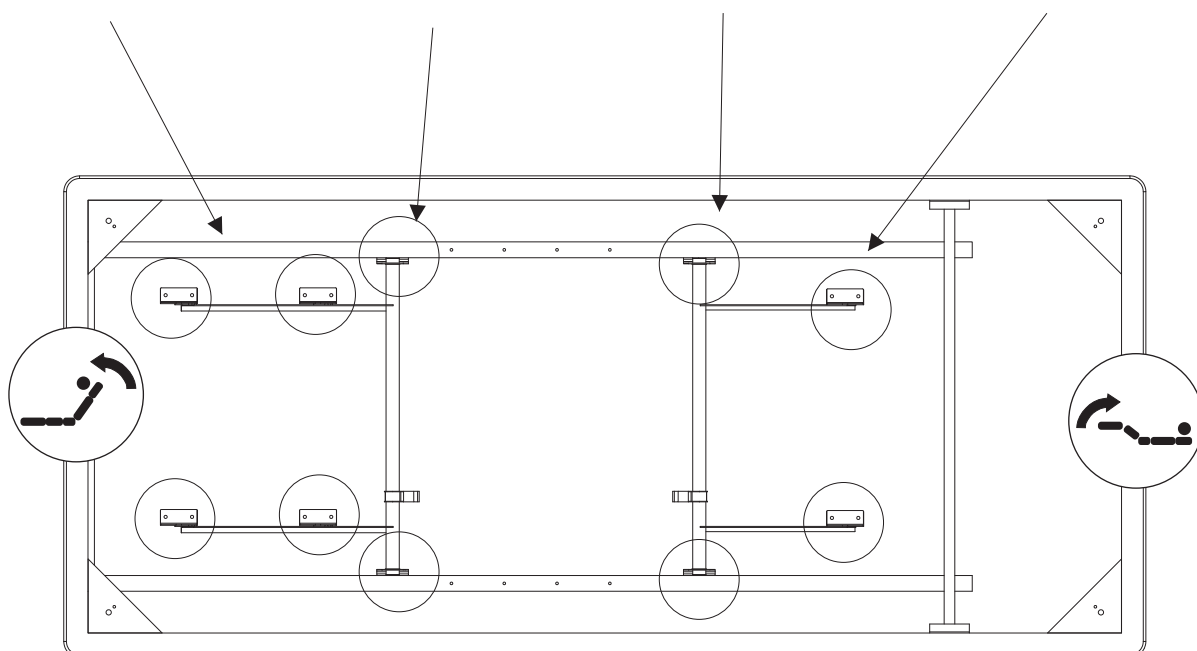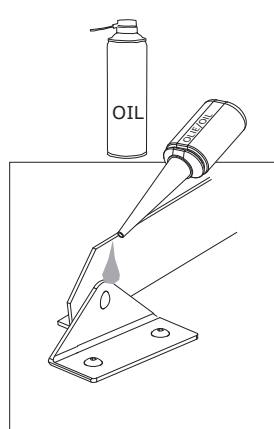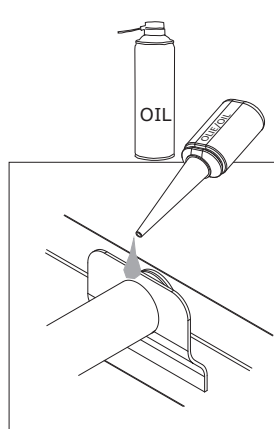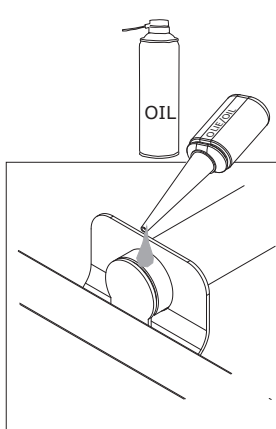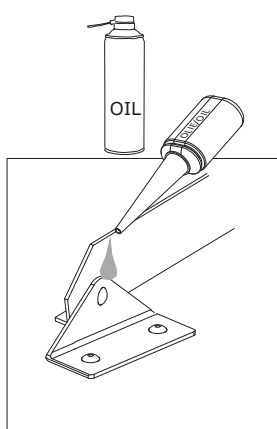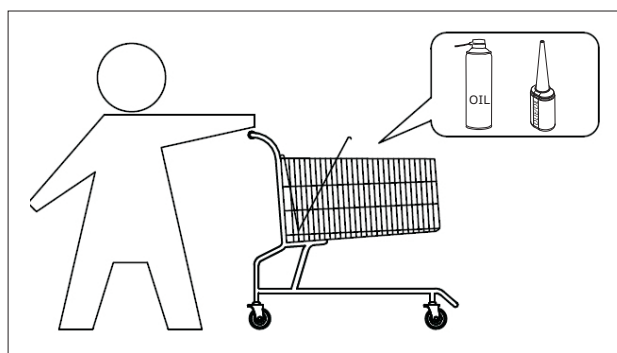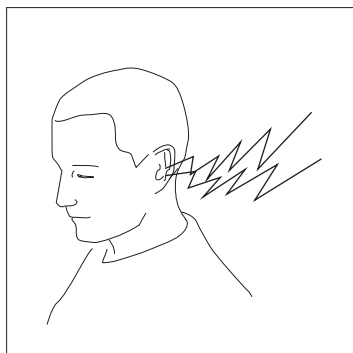       

80/90x200/210cm

